


FUEL SYSTEM

Install the float with float valve to the carburetor body and install the float arm pin through the body and float.

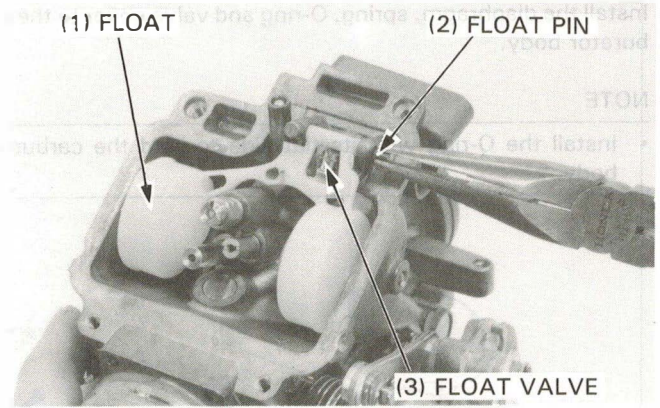

FLOAT LEVEL


Measure the float level with the carburetor inclined 15°–45° from vertical so that the float tang just contacts the float valve.

FLOAT LEVEL: 9.5 mm (0.37 in)

TOOL:


Float level gauge 07401–0010000

Adjust the float level by carefully bending the float tang.

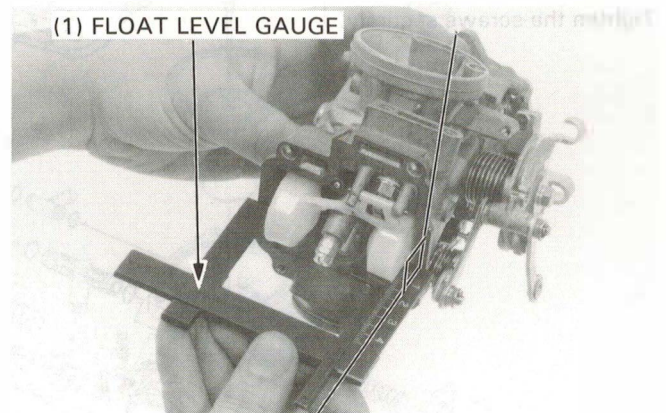

Install a new O-ring to the float chamber.

Install the float chamber and tighten the screws securely.

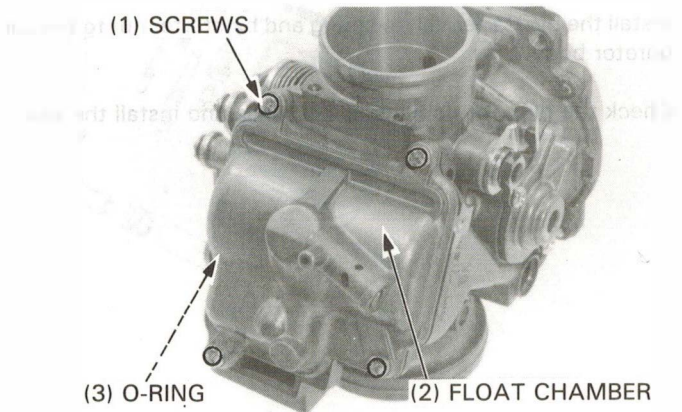

Install the washer, jet needle, spring and jet needle holder to the vacuum piston.

Push the jet needle holder in and turn it 90 degrees clockwise.

